

## Installation Instructions

Original Instructions



**Allen-Bradley**

by ROCKWELL AUTOMATION

# Stratix 5700 Ethernet Managed Switches

Catalog Numbers 1783-BMS12T4E2CGL, 1783-BMS12T4E2CGP, 1783-BMS12T4E2CGNK, 1783-BMS06SL, 1783-BMS06SA, 1783-BMS06TL, 1783-BMS06TA, 1783-BMS06SGL, 1783-BMS06SGA, 1783-BMS06TGL, 1783-BMS06TGA, 1783-BMS10CL, 1783-BMS10CA, 1783-BMS10CGL, 1783-BMS10CGA, 1783-BMS10CGN, 1783-BMS10CPG, 1783-BMS20CL, 1783-BMS20CA, 1783-BMS20CGL, 1783-BMS20CPG, 1783-BMS20CGN, 1783-BMS20CPK, 1783-BMS4S2SGL, 1783-BMS4S2SGA

Topic	Page
Required Tools	5
Site Requirements	6
Mount the Switch	6
Ground the Switch	6
Wire the DC Power Source	7
Install the Power Connectors on the Switch	9
Wire External Alarms	9
Install the Alarm Relay Connector on the Switch	11
Wire the PoE Power Source	11
Install the PoE Power Connector on the Switch	12
Install or Remove an SFP Module	12
Install or Remove the SD Card	13
Connect to 10/100 and 10/100/1000 Ports	14
Connect to 10Base-T, 100Base-TX, or 1000Base-T Ports	14
Connect to PoE Ports	14
Connect to SFP Module Ports	15
Connect to a Dual-purpose Port	15
Confirm Installation	16
Remove Power from a Switch with PoE	16
Remove the Switch from the DIN Rail	16
Specifications	17
Additional Resources	17

## Summary of Changes

This publication contains the following new or updated information. This list includes substantive updates only and is not intended to reflect all changes.

Topic	Page
UK and European Hazardous Location Approval	4





**ATTENTION:** This is a Class A Information Product. When used in a residential environment, it may cause radio frequency interference. Under such circumstances, the user may be requested to take appropriate countermeasures.

警告 這是甲類資訊產品，在居住環境中使用時，可能會造成射頻干擾。  
在這種情況下，使用者會被要求採取某些適當的對策。



**ATTENTION:** This equipment is sensitive to electrostatic discharge, which can cause internal damage and affect normal operation. Follow these guidelines when you handle this equipment:

- Touch a grounded object to discharge potential static.
- Wear an approved grounding wriststrap.
- Do not touch connectors or pins on component boards.
- Do not touch circuit components inside the equipment.
- Use a static-safe workstation, if available.
- Store the equipment in appropriate static-safe packaging when not in use.



**ATTENTION:** The console ports are intended for temporary local programming purposes only and not intended for permanent connection. The console port cables are not to exceed 3.0 m (9.84 ft) and must not contain hubs.



**ATTENTION:** This product is grounded through the DIN rail to chassis ground. Use zinc-plated yellow-chromate steel DIN rail to assure proper grounding. The use of other DIN rail materials (for example, aluminum or plastic) that can corrode, oxidize, or are poor conductors, can result in improper or intermittent grounding. Secure DIN rail to mounting surface approximately every 200 mm (7.8 in.) and use end-anchors appropriately. Be sure to ground the DIN rail properly. Refer to Industrial Automation Wiring and Grounding Guidelines, Rockwell Automation publication [1770-4.1](#), for more information.



**ATTENTION:** Under certain conditions, viewing the optical port may expose the eye to hazard. When viewed under some conditions, the optical port may expose the eye beyond the maximum permissible exposure recommendations.



**ATTENTION:** Class 1 laser product. Laser radiation is present when the system is open and interlocks bypassed. Only trained and qualified personnel should be allowed to install, replace, or service this equipment.



**ATTENTION:** This equipment is certified for use only within the surrounding air temperature range of -40...+60 °C (-40...+140 °F). The equipment must not be used outside of this range.



**ATTENTION:** Power to this equipment and all connected I/O must be supplied from a source compliant with the following:

- Class 2 approved to UL1310
- SELV source approved to EN/IEC60950-1, EN/IEC61010-2-201 or EN/IEC62368-1 (ES1)
- PELV source approved to EN/IEC60950-1, EN/IEC61010-2-201 or EN/IEC62368-1 (ES1)



**ATTENTION:** Use SFP modules from only Rockwell Automation. For details about supported modules, see the Stratix Ethernet Device Specifications Technical Data, publication [1783-TD001](#).



**ATTENTION:** For proper grounding, you must always connect the power supply functional-ground screw when connecting the power supply. You must provide an acceptable grounding path for each device in your application. For more information on proper grounding guidelines, refer to publication [1770-4.1](#), Industrial Automation Wiring and Grounding Guidelines.



**ATTENTION:** The alarm port cables are not to exceed 10.0 m (32.81 ft).

**WARNING:**

- This equipment is not resistant to sunlight or other sources of UV radiation.
- This equipment shall be mounted in an ATEX Zone 2 certified enclosure with a minimum ingress protection rating of at least IP54 (in accordance with EN IEC 60079-0) and used in an environment of not more than Pollution Degree 2 (as defined in EN 60664-1) when applied in Zone 2 environments. The enclosure must be accessible only by the use of a tool.
- This equipment shall be used within its specified ratings defined by Rockwell Automation.
- Provision shall be made to prevent the rated voltage from being exceeded by transient disturbances of more than 140% of the peak rated voltage when applied in Zone 2 environments.
- The instructions in the user manual shall be observed.
- Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product.
- Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous.
- The USB port is intended for temporary local programming purposes only and not intended for permanent connection. Do not use the USB port in hazardous locations.

**UK and European Hazardous Location Approval****The following applies to products marked  II 3 G: Such modules:**

- Are Equipment Group II, Equipment Category 3, and comply with the Essential Health and Safety Requirements relating to the design and construction of such equipment given in Annex II to EU Directive 2014/34/EU and Schedule 1 of the UKEX Regulation 2016 No. 1107. See the UKEX and EU Declaration of Conformity at [rok.auto/certifications](#) for details.
- The type of protection is <Ex ec nC IIC T4 Gc> Equipment protection by increased safety "e".
- Equipment protection by increased safety "e", reference certificate number DEMKO 12 ATEX 8694536X and UL220UKEX2598X.
- Are intended for use in areas in which explosive atmospheres caused by gases, vapors, mists, or air are unlikely to occur, or are likely to occur only infrequently and for short periods. Such locations correspond to Zone 2 classification according to UKEX Regulation 2016 No. 1107 and ATEX directive 2014/34/EU.

**North American Hazardous Location Approval**

<b>The following information applies when operating this equipment in hazardous locations.</b>	<b>Informations sur l'utilisation de cet équipement en environnements dangereux.</b>
<p>Products marked "CL I, DIV 2, GP A, B, C, D" are suitable for use in Class I Division 2 Groups A, B, C, D, Hazardous Locations and nonhazardous locations only. Each product is supplied with markings on the rating nameplate indicating the hazardous location temperature code. When combining products within a system, the most adverse temperature code (lowest "T" number) may be used to help determine the overall temperature code of the system. Combinations of equipment in your system are subject to investigation by the local Authority Having Jurisdiction at the time of installation.</p>	<p>Les produits marqués "CL I, DIV 2, GP A, B, C, D" ne conviennent qu'à une utilisation en environnements de Classe I Division 2 Groupes A, B, C, D dangereux et non dangereux. Chaque produit est livré avec des marquages sur sa plaque d'identification qui indiquent le code de température pour les environnements dangereux. Lorsque plusieurs produits sont combinés dans un système, le code de température le plus défavorable (code de température le plus faible) peut être utilisé pour déterminer le code de température global du système. Les combinaisons d'équipements dans le système sont sujettes à inspection par les autorités locales qualifiées au moment de l'installation.</p>

**WARNING: EXPLOSION HAZARD**

- Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous.
- Do not disconnect connections to this equipment unless power has been removed or the area is known to be nonhazardous. Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product.
- Substitution of components may impair suitability for Class I, Division 2.
- If this product contains batteries, they must only be changed in an area known to be nonhazardous.

**WARNING: RISQUE D'EXPLOSION**

- Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher l'équipement.
- Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher les connecteurs. Fixer tous les connecteurs externes reliés à cet équipement à l'aide de vis, loquets coulissants, connecteurs filetés ou autres moyens fournis avec ce produit.
- La substitution de composants peut rendre cet équipement inadapté à une utilisation en environnement de Classe I, Division 2.
- S'assurer que l'environnement est classé non dangereux avant de changer les piles.

**North American Zones:**

**UL 60079-0, 5th Ed, 2009-10-21; UL 60079-15, 3rd Ed, 2009-7-17; CAN/CSA C22.2 No. 60079-15-12 Ed. 1; CAN/CSA C22.2 No. 60079-0-11 Ed. 2**

**WARNING:** If you connect or disconnect the communications cable with power applied to this module or any device on the network, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

**WARNING:** If you connect or disconnect wiring while the field-side power is on, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

**WARNING:** When you insert or remove the CompactFlash/SD memory card while power is on, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.

**WARNING:** The console port is intended for temporary local programming purposes only and not intended for permanent connection. If you connect or disconnect the console cable with power that is applied to this module or any device on the network, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.



**WARNING:** When you insert or remove the small form factor pluggable (SFP) optical transceiver while power is on, an electric arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.




**WARNING:** Do not use the USB-mini console port in hazardous locations.

## Parts List

Verify that you have these items.

The Power over Ethernet (PoE) connector ships only with switch models with PoE ports. The connector is required only if you plan to use PoE.

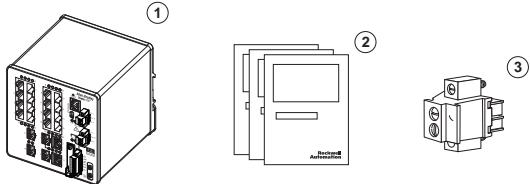

1 Stratix® 5700 switch

2 Documentation

3 PoE connector

If needed, an SD card can be ordered separately from the switch.



At the end of its life, this equipment should be collected separately from any unsorted municipal waste.

## Required Tools

Obtain these tools:

- Ratcheting torque screwdriver that exerts up to 1.69 N·m (15 in-lbs) of pressure
- Small, flat-blade screwdriver
- #6 ring terminal lug for 5.3 mm<sup>2</sup> (10 AWG) wire, such as Thomas & Bett part number 10RC6 or equivalent
- Crimping tool, such as Thomas & Bett part number WT2000, ERG-2001, or equivalent
- 5.3 mm<sup>2</sup> (10 AWG) copper ground wire, such as Belden part number 9912 or equivalent
- Wire-stripping tool
- For panel-mounting without a DIN rail, M5 or #10-24 or #10-32 bolts or screws with 1.27 cm (0.5 in.) O.D. flat washers

For simplified cabling, the automatic medium dependent interface crossover (auto-MDIX) feature is enabled by default on the switch. With auto-MDIX enabled, the switch detects the required cable type for copper Ethernet connections and configures the interfaces accordingly. You can use a crossover or a straight-through cable for connections to an Ethernet port, regardless of the type of device on the other end of the connection.

## Site Requirements

Observe these site requirements:

- Clearance to front and rear panels meets these conditions:
  - Front-panel status indicators can be easily read.
  - Access to ports is sufficient for unrestricted cabling.
  - Front-panel DC power connectors and the alarm relay connector are within reach of the connection to the DC power source.
- To help prevent the switch from overheating, observe these minimum clearances:
  - Top and bottom: 50.8 mm (2.0 in.)
  - Sides: 50.8 mm (2.0 in.)
  - Front: 50.8 mm (2.0 in.)
- Temperature surrounding the unit does not exceed 60 °C (140 °F).

---

**IMPORTANT** When the switch is installed in an industrial enclosure, the temperature within the enclosure is greater than normal room temperature outside the enclosure. The temperature inside the enclosure cannot exceed 60 °C (140 °F), the maximum ambient enclosure temperature of the switch.

---

- For 10/100 ports and 10/100/1000 ports, the cable length from a switch to an attached device cannot exceed 100 m (328 ft).
- Cabling is away from sources of electrical noise, such as radios, power lines, and fluorescent lighting fixtures.
- For maximum noise immunity, shielded cables must be used on the RJ45 uplink ports (Gi1/1 and Gi1/2) on these switches:

<ul style="list-style-type: none"> <li>- 1783-BMS06TGL</li> <li>- 1783-BMS06TGA</li> </ul>	<ul style="list-style-type: none"> <li>- 1783-BMS10CGL</li> <li>- 1783-BMS10CGA</li> <li>- 1783-BMS10CGN</li> <li>- 1783-BMS10CGP</li> </ul>	<ul style="list-style-type: none"> <li>- 1783-BMS12T4E2CGNK</li> <li>- 1783-BMS12T4E2CGP</li> <li>- 1783-BMS12T4E2CGL</li> </ul>	<ul style="list-style-type: none"> <li>- 1783-BMS20CGL</li> <li>- 1783-BMS20CGN</li> <li>- 1783-BMS20CGP</li> <li>- 1783-BMS20CGPK</li> </ul>
--	--	--	---

- Connect the unit to only a Class 2 DC power source.

## Mount the Switch

The switch ships with a spring-loaded latch on the rear panel for mounting on a DIN rail.


---

**IMPORTANT** The switch must be mounted in an upright orientation, as shown in these instructions. Alternative mounting orientations are not supported.

---

To mount the switch on a DIN rail, follow these steps.

1. Position the rear panel of the switch directly in front of the DIN rail.  
Make sure that the DIN rail fits in the space between the two hooks near the top of the switch and the spring-loaded latch near the bottom.
2. Hold the bottom of the switch away from the DIN rail, and place the two hooks on the back of the switch over the top of the DIN rail.

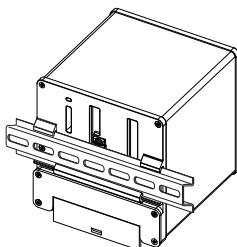

3. Push the switch toward the DIN rail until the spring loaded latch at the bottom rear of the switch moves down and snaps into place.

## Ground the Switch


For DC power connections, use UL- and CSA-rated, style 1007 or 1569 twisted-pair copper appliance wiring material (AWM) wire. Use at least 4 mm<sup>2</sup> (12 AWG) wire to connect to the external grounding screw.

The ground lug is not supplied with the switch. You can use one of these options:


- Single ring terminal
- Two single ring terminals

To ground the switch to earth ground, follow these steps. Be sure to follow any grounding requirements at your site.

1. To remove the ground screw from the front panel of the switch, use a Phillips screwdriver or a ratcheting torque screwdriver with a Phillips head.  
Store the ground screw for later use.
2. Use the guidelines from the manufacturer to determine the wire length to be stripped.
3. Insert the ground wire into the ring terminal lug and use a crimping tool to crimp the terminal to the wire.  
If you are using two ring terminals, repeat this action for the second ring terminal.

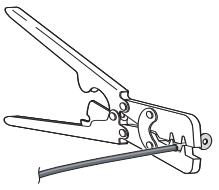

4. Slide the ground screw through the terminal.
5. Insert the ground screw into the functional ground screw opening on the front panel.

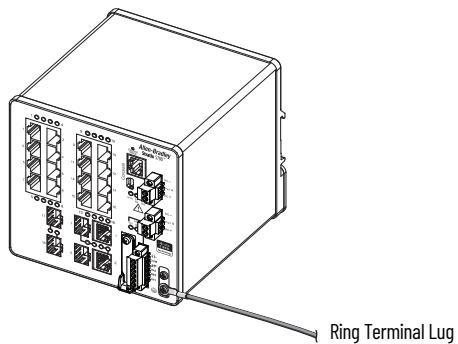

6. Use a ratcheting torque screwdriver to tighten the ground screws and ring terminal lugs to the switch front panel to 0.4 N•m (3.5 in•lb).  
Do not exceed the recommended torque.
7. Attach the other end of the ground wire to a grounded bare metal surface, such as a ground bus, a grounded DIN rail, or a grounded bare rack.


## Wire the DC Power Source

To wire the DC power source for the switch, follow these steps.


1. Locate the power connector.




2. Identify the positive and return DC power connections.  
The positive DC power connection is labeled DC+, and the negative DC power connection is the adjacent connection labeled DC-.
3. Measure a length of 0.82...0.52 mm<sup>2</sup> (18...20 AWG) copper wire long enough to connect to the DC power source.
4. Use an 18-gauge wire-stripping tool to strip each of the two wires to 6.3 mm (0.25 in.) ± 0.5 mm (0.02 in.).  
Do not strip more than 6.8 mm (0.27 in.) of insulation from the wire. Stripping more than the recommended amount of wire can leave wire exposed after installation.

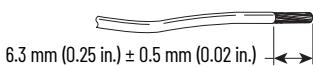


5. Loosen the two captive screws that attach the power connector to the switch, and remove the power connector.  
Remove both connectors if you are connecting to two power sources.

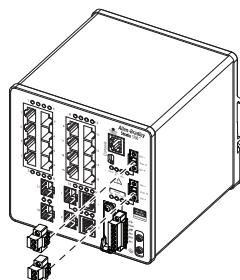

6. Insert the exposed part of the positive wire into the connection that is labeled DC+ and the exposed part of the return wire into the connection labeled DC-. Be sure that you cannot see any wire lead. Only wire with insulation can extend from the connector.

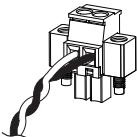

7. Use a ratcheting-torque screwdriver to torque the captive screws of the power connector to 0.23 N•m (2.0 in•lb). Do not exceed the recommended torque.

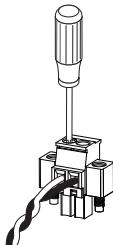

8. Connect the other end of the positive wire to the positive terminal on the DC power source.
9. Connect the other end of the return wire to the return terminal on the DC power source.


---

**IMPORTANT** On switches that support PoE, do not connect the negative (return) terminal of the DC power source to earth ground.

---

When you are testing the switch, one power connection is sufficient. If you are installing the switch and are using a second power source, repeat this procedure with the second power connector.


The following figure shows the completed DC input wiring on a power connector for a primary power source and an optional secondary power source.

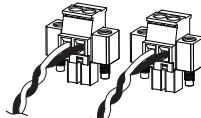


## Install the Power Connectors on the Switch

To install the switch power connectors to the front panel of the switch, follow these steps.

1. Insert one power connector into the Pwr A receptacle on the switch front panel, and the other into the Pwr B receptacle.

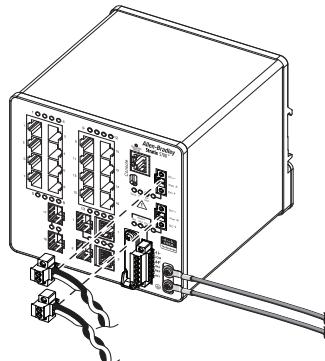

2. Use a ratcheting torque flathead screwdriver to tighten the captive screws on the sides of the power connectors.

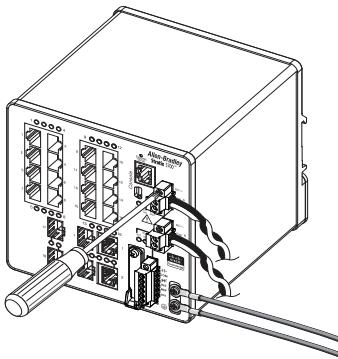

When you test the switch, one power source is sufficient. If you install a second power source, repeat this procedure for the second power connector (Pwr B).

3. When you install the switch, secure the wires from the power connectors to the rack by using tie wraps.

## Wire External Alarms

The switch has two alarm inputs and one Form C (single-pole, double-throw) alarm output relay circuits for external alarms. The input alarm relay circuits are designed to sense if the alarm input is open or closed relative to the alarm input reference pin. The output alarm relay circuit has one Form C relay, with one normally open (N.O.) and one normally closed (N.C.) contact. You can configure the output alarm relay as either normally energized or normally de-energized by using the CLI.

Alarm signals are connected to the switch through the 6-way alarm relay connector. Three connections are dedicated to the two alarm input circuits:

- Alarm input 1 (IN1)
- Alarm input 2 (IN2)
- Isolated reference ground

An alarm input and the reference ground wiring connection are required to complete one input alarm circuit. You must provide either an N.O. or an N.C. dry contact to complete the alarm circuit between reference ground and IN1 or IN2.



**ATTENTION:** Do not apply an external voltage source to either the IN1 or IN2 alarm inputs. Limit alarm output wiring to 48V DC, 0.5 A.

The three remaining connections for the Form C output alarm circuit are as follows:

- N.O. output
- N.C. output
- common

An alarm output and the common wiring connection are required to complete one output alarm circuit. The Form C output alarm relay provides one N.O. and one N.C. dry contact.



**ATTENTION:** Wire connections to the power and relay connector, must be UL- and CSA-rated, style 1007 or 1569 twisted-pair copper appliance wiring material (AWM) wire.


The labels for the alarm relay connector are on the switch panel.

#### Alarm Relay Connector Labels


Label	Connection
N.O.	Alarm Output Normally Open (N.O.) connection
COM	Alarm Output Common connection
N.C.	Alarm Output Normally Closed (N.C.) connection
IN2	Alarm Input 2
REF	Alarm Input Reference Ground connection
IN1	Alarm Input 1

To wire the switch to an external alarm device, follow these steps.

1. Loosen the captive screws that hold the alarm relay connector on the switch, and remove the connector from the switch chassis.

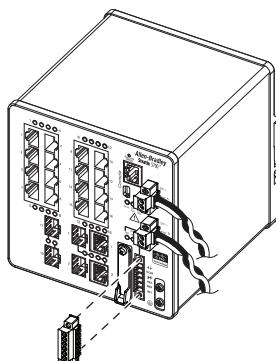


2. Measure two strands of twisted-pair wire (18...20 AWG) long enough to connect to the external alarm device. Choose between creating an external alarm input or output circuit.
3. Use a wire stripper to remove the casing from both ends of each wire to 6.3 mm (0.25 in.)  $\pm$  0.5 mm (0.02 in.). Do not strip more than 6.8 mm (0.27 in.) of insulation from the wires. Stripping more than the recommended amount of wire can leave exposed wire from the alarm relay connector after installation.
4. Insert the exposed wires for the external alarm device into the connections that are based on an alarm input or output circuit setup. See [Table on page 10](#).
5. Use a ratcheting torque flathead screwdriver to torque the captive screw of the alarm relay connector to 0.23 N•m (2.0 in•lb). Do not exceed the recommended torque.

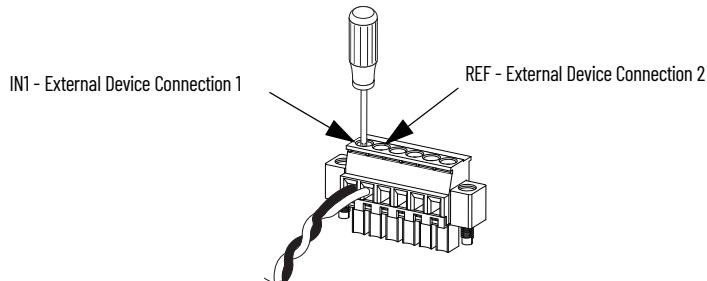

6. Repeat the preceding procedure to insert the input and output wires of one more external alarm device into the alarm relay connector.


The following figure shows the completed wiring for two external alarm devices. The first alarm device circuit is wired as an alarm relay input circuit—the IN1 and REF connections complete the circuit. The second alarm device circuit is wired as an alarm relay output circuit by using the normally open side of the form C relay contacts. The N.O. and COM connections complete the circuit.

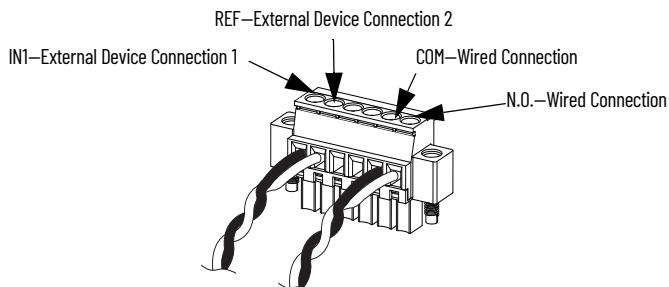

## Install the Alarm Relay Connector on the Switch

To attach the alarm relay connector to the front panel of the switch, follow these steps.

1. Insert the alarm relay connector into the receptacle on the switch front panel.
2. Use a ratcheting torque flathead screwdriver to tighten the captive screws on the sides of the alarm relay connector.

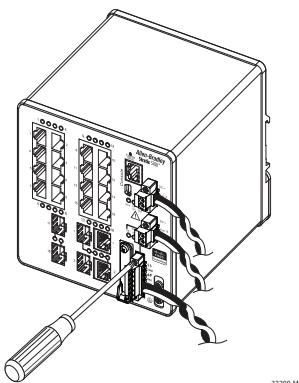

32290-M

## Wire the PoE Power Source


This procedure applies only to switches with PoE ports. The switch must be wired and grounded.

Power input requirements depend on your application.

Application	Power Input per Port	Power Consumption	Allen-Bradley® Products
PoE only IEEE 802.3af	44...57V DC (48V DC, nom)	15.4 W, max	Switched mode power supplies: • 1606-XL Standard
PoE and PoE+ IEEE 802.3 at Type 2	50...57V DC (54V DC, nom)	15.4 W, max for PoE 30 W, max for PoE+	• 1606-XLE Essential • 1606-XLP Compact • 1606-XLS Performance


1. Measure a length of 0.82...0.52 mm<sup>2</sup> (18...20 AWG) copper wire long enough to connect to the DC power source.
2. Using an 18-gauge wire-stripping tool, strip each of the two wires to 6.3 mm (0.25 in.) ± 0.5 mm (0.02 in.).

Do not strip more than 6.8 mm (0.27 in.) of insulation from the wire. Stripping more than the recommended amount of wire can leave wire exposed after installation.

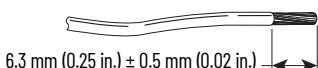

3. Locate the power connector.

4. Insert the exposed part of the positive wire into the DC+ connection and the exposed part of the return wire into the DC- connection.  
Make sure that you cannot see any wire lead. Only wire with insulation can extend from the connector.

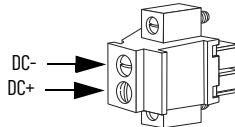


5. Use a ratcheting-torque screwdriver to torque the captive screws of the power connector to 0.23 N·m (2.0 in·lb).
6. Connect the other end of the positive wire (the one connected to DC+) to the positive terminal on the DC power source.
7. Connect the other end of the return wire (the one connected to DC-) to the return terminal on the DC power source.

## Install the PoE Power Connector on the Switch

This procedure applies only to switches with PoE ports.

1. Insert the power connector into the DC input terminal block on the switch front panel.
2. Use a screwdriver to tighten the captive screws on the sides of the power connector.

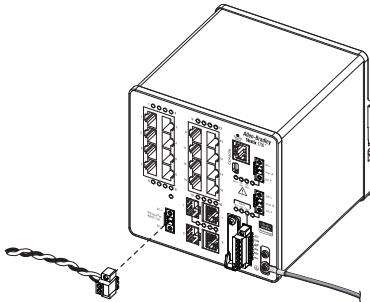

## Install or Remove an SFP Module

On switch catalog numbers that support communication over fiber-optic cable, SFP modules are inserted into SFP module slots on the front of the switch. These field-replaceable modules provide the uplink optical interfaces, send (TX) and receive (RX).

You can use any combination of compatible SFP modules:

- Each SFP module must be of the same type as the SFP module on the other end of the cable. The cable must not exceed the stipulated cable length for reliable communications.
- Once you install SFP modules in the switch, be aware that the overall temperature rating of the combined modules (switch and SFP modules) is limited to the lowest maximum temperature rating and the highest minimum temperature rating.
- For cable length and temperature specifications, see the Stratix Ethernet Device Specifications Technical Data, publication [1783-TD001](#).


To insert or remove an SFP module into an SFP slot, follow these steps.

1. Attach an ESD-preventive wriststrap to your wrist and to a grounded bare metal surface.
2. To install an SFP module, do the following.
  - a. Grasp both sides of the SFP module and align the module sideways in front of the slot opening.




**ATTENTION:** If the SFP module cannot be fully inserted, stop! Do not force the module into the slot. Rotate the SFP module 180° and try again.

- b. Insert the SFP module into the slot as shown in the following figure until you feel the connector on the module snap into place in the rear of the slot.

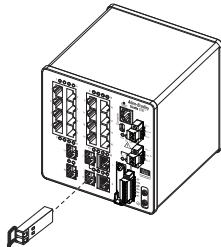

- c. Remove the dust plugs from the SFP module optical ports, store them for later use.

3. To remove an SFP module from an SFP slot, follow these steps.
  - a. Disconnect the fiber LC connector from the SFP module.
  - b. Insert a dust plug into the optical ports of the SFP module to keep the optical interfaces clean.
  - c. Unlock and remove the SFP module.
  - d. If the module has a bale-clasp latch, swing the bale toward you and pull it gently to eject the module. If the bale-clasp latch is obstructed and you cannot use your index finger to open it, use a small, flat-blade screwdriver or other long, narrow instrument to open the latch.

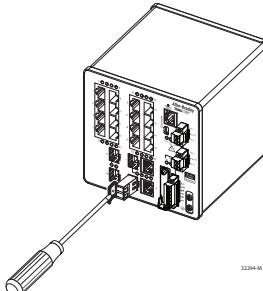


- e. Grasp the SFP module between your thumb and index finger, and carefully remove it from the module slot.
- f. Place the removed SFP module in an anti-static bag or other protective environment.


## Install or Remove the SD Card

To install or replace the optional SD card, follow these steps.

1. On the front of the switch, locate the door that protects the SD card slot.
2. Loosen the captive thumb screw at the top of the door by using a screwdriver to open the door.
3. To install the card, slide it into the slot, and press it firmly in place until it latches in the spring loaded mechanism.  
The card is keyed so that you cannot fully insert it the wrong way.

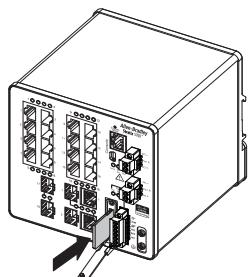

4. To remove the card, push it in and let it pop out via the spring-loaded mechanism. Grasp the card top and pull it out. To protect it from static discharge, place it in an anti-static bag.

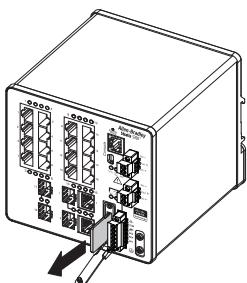

5. Close the guard door and fasten the captive screw by using a screwdriver to keep the door in place.

## Connect to 10/100 and 10/100/1000 Ports

The switch 10/100/1000 ports automatically configure themselves to operate at the speed of attached devices. If the attached ports do not support autonegotiation, you can explicitly set the speed and duplex parameters. Connecting devices that do not autonegotiate or that have their speed and duplex parameters that are manually set can reduce performance or result in no linkage.

The auto-MDIX feature is enabled by default. Unless this feature is disabled, you can use either straight-through or crossover cables to connect to other devices on the network.


To maximize performance, choose one of these methods for configuring the Ethernet ports:

- Let the ports autonegotiate both speed and duplex
- Set the port speed and duplex parameters on both ends of the connection

## Connect to 10Base-T, 100Base-TX, or 1000Base-T Ports

To connect to 10Base-T, 100Base-TX, or 1000Base-T ports, follow these steps.

1. To connect a device, choose one of the following options:
  - When connecting to workstations, servers, and routers, connect a straight-through cable to an RJ45 connector on the front panel.
  - When connecting to 1000Base-T-compatible devices, use a twisted four-pair, Category 5e or higher cable.

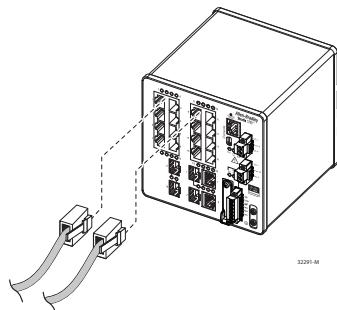

2. Connect the other end of the cable to an RJ45 connector on the other device.

The port status indicator turns on when both the switch and the connected device have an established link.

The port status indicator is amber while Spanning Tree Protocol (STP) discovers the topology and searches for loops. This can take up to 30 seconds, and then the Port status indicator turns green.

The following conditions can prevent the port status indicator from turning On:


- The device at the other end is not turned On.
- A problem exists with a cable or the adapter that is installed in the attached device.

3. Reconfigure and restart the connected device if necessary.
4. To connect each device, repeat this procedure.

## Connect to PoE Ports

Switches with PoE ports require a separate power supply. For power input requirements based on your application, refer to [page 11](#).

1. Insert a straight-through, twisted four-pair, Category 5e or better cable with an RJ45 connector into the PoE port.

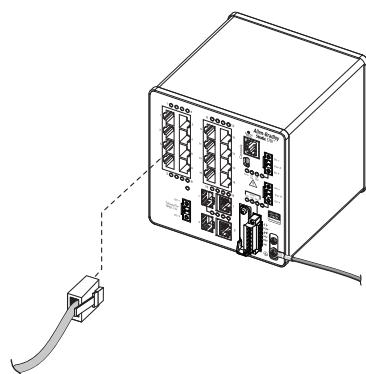


2. Insert the other cable end into an RJ45 connector on the other PoE powered device.

## Connect to SFP Module Ports

To connect a fiber-optic cable to an SFP module, follow these steps.

1. Remove the rubber plugs from the module port and fiber-optic cable, and store them for future use.
2. Insert one end of the fiber-optic cable into the SFP module port.

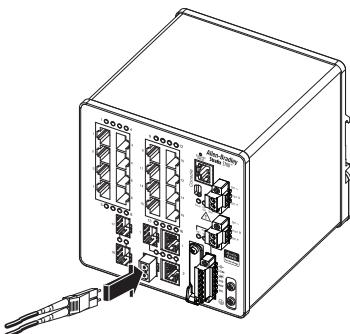


3. Insert the other cable end into a fiber-optic receptacle on a target device.
  4. Observe the port status indicator:
    - The status indicator turns amber while the SFP discovers the network topology and searches for loops. This process takes about 30 seconds, and then the port status indicator turns green.
    - The status indicator turns green when the switch and the target device have an established link.
    - The status indicator turns off if the target device is not turned on or there is a problem with the cable or the adapter that is installed in the target device.
- If necessary, reconfigure and restart the switch or the target device.

## Connect to a Dual-purpose Port

A dual-purpose port is one port with two interfaces, one for an RJ45 cable and another for an approved SFP module. Only one interface can be active at a time. If both interfaces are connected, the SFP module has priority.

To connect to a dual-purpose port, follow these steps.

1. Connect an RJ45 connector or install an SFP module into the SFP module slot, and connect a cable to the SFP module.

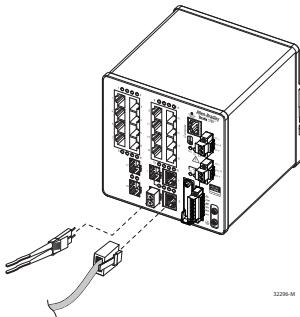

2. Connect the other end of the cable to the other device.

By default, the switch detects whether an RJ45 connector or SFP module is connected to a dual-purpose port and configures the port accordingly. You can change this setting and configure the port to recognize only an RJ45 connector or only an SFP module by using the media type interface configuration command.

## Confirm Installation

To confirm the installation, power on the switch, and verify that the switch powers up. The time that is required for the switch to startup is directly related to your switch configuration. Start time is negatively affected by such things as the following:

- Spanning Tree Learning mode
- Number of files or images in onboard memory

To test the switch, follow these steps.

1. Apply power to the switch.

If the switch is directly connected to a DC power source, locate the circuit breaker on the panel board that services the DC circuit, and switch the circuit breaker to the On position.

2. Verify the startup sequence.

When you power on the switch, it begins a startup routine. The Setup status indicator blinks green as the IOS software image loads. If the routine fails, the Setup status indicator turns red.

---

**IMPORTANT** Startup failures are usually fatal to the switch. Contact your Rockwell Automation representative immediately if your switch does not complete the start sequence successfully.

---

3. After successfully running this test, do the following:
  - a. Turn off power to the switch.
  - b. Disconnect the cables.
  - c. Decide where you want to install the switch

## Remove Power from a Switch with PoE

Switches with PoE capability in the following configuration require special instructions to disconnect power:


- The switches are connected to the same power supply
- The PoE ports on both switches are connected to each other via Ethernet cables

If you use the preceding configuration, you must disconnect both DC+ and DC- connections to power down an individual switch.

## Remove the Switch from the DIN Rail

To remove the switch from a DIN rail or a rack, follow these steps.

1. Remove power from the switch, and disconnect all cables and connectors from the front panel of the switch.
2. Insert a tool, such as a flat-head screwdriver, in the slot at the bottom of the spring-loaded latch and use it to release the latch from the rail.

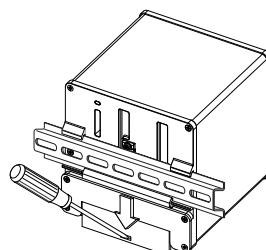

## Specifications

<b>Attribute</b>	<b>1783-BMS12T4E2CGL, 1783-BMS12T4E2CGP, 1783-BMS12T4E2CGNK</b>	<b>1783-BMS4S2SGL, 1783-BMS4S2SGA</b>	<b>1783-BMS06SA, 1783-BMS06SGL, 1783-BMS06SGA, 1783-BMS06SL, 1783-BMS06TA, 1783-BMS06TGL, 1783-BMS06TGA, 1783-BMS06TL, 1783-BMS10CL, 1783-BMS10CA, 1783-BMS10CGL, 1783-BMS10CGA, 1783-BMS10CGP, 1783-BMS10CGN</b>	<b>1783-BMS20CL, 1783-BMS20CA, 1783-BMS20CGL, 1783-BMS20CGP, 1783-BMS20CGPK, 1783-BMS20CGN</b>
Temperature, surrounding air, max	60 °C (140 °F)			
Enclosure type rating	None (open-style)			
Switch power input, max	12...48V DC, 0.5 ...3.0 A	12...48V DC, 0.5 ... 2.0 A		12...48V DC, 0.5 ...3.0 A
PoE power input	44...57V DC, 2.5 A max	—		
PoE+ power input	50...57V DC, 2.5 max	—		
Alarm relay	30V DC, 1.0 A, or 48V DC, 0.5 A			
Isolation voltage	60V (continuous), basic insulation type, DC power ports to ground, and PoE power ports to ground No isolation between individual Ethernet ports No isolation between PoE power and Ethernet ports No isolation between console port and system	50V (continuous), basic insulation type, DC power ports to ground, DC power ports to Ethernet ports, and DC power ports to alarm ports No isolation between individual Ethernet ports No isolation between console port and system		
Wire size, DC power connections	0.5...0.8 mm <sup>2</sup> (20...18 AWG) solid or stranded, UL/CSA-rated style 1007 or 1569 twisted-pair copper appliance wiring material (AWM) wire (such as Belden part number 9318), 6.3 mm (0.25 in.) ± 0.5 mm (0.02 in.) strip length			
Wire size, ground connection	4.0 mm <sup>2</sup> (12 AWG) min, stranded copper wire			
Wire size, alarm connections	0.5...0.8 mm <sup>2</sup> (20...18 AWG) solid or stranded, UL/CSA-rated style 1007 or 1569 twisted-pair copper appliance wiring material (AWM) wire (such as Belden part number 9318), 6.3 mm (0.25 in.) ± 0.5 mm (0.02 in.) strip length			
Screw torque, power terminals	0.23 N•m (2.0 in•lb)			
Screw torque, ground terminals	0.4 N•m (3.5 in•lb)			
Screw torque, alarm terminals	0.23 N•m (2.0 in•lb), max			
Pilot duty rating	Alarm not rated			
North American temp code	T4			
ATEX temp code	T4			

## Additional Resources

These documents contain additional information concerning related products from Rockwell Automation.

Resource	Description
Stratix Ethernet Device Specifications Technical Data, publication <a href="#">1783-TD001</a>	Provides specification information for Ethernet switches and other devices.
Stratix Managed Switches User Manual, publication <a href="#">1783-UM002</a>	Provides information about configuring, monitoring, and troubleshooting the switches.
Industrial Automation Wiring and Grounding Guidelines, publication <a href="#">1770-4.1</a>	Provides general guidelines for installing a Rockwell Automation industrial system.
Product Certifications website, <a href="http://rok.auto/certifications">rok.auto/certifications</a>	Provides declarations of conformity, certificates, and other certification details.

You can view or download publications at <http://www.rockwellautomation.com/global/literature-library/overview.page>. To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.

# Rockwell Automation Support

Use these resources to access support information.

<b>Technical Support Center</b>	Find help with how-to videos, FAQs, chat, user forums, and product notification updates.	<a href="http://rok.auto/support">rok.auto/support</a>
<b>Knowledgebase</b>	Access Knowledgebase articles.	<a href="http://rok.auto/knowledgebase">rok.auto/knowledgebase</a>
<b>Local Technical Support Phone Numbers</b>	Locate the telephone number for your country.	<a href="http://rok.auto/phonesupport">rok.auto/phonesupport</a>
<b>Literature Library</b>	Find installation instructions, manuals, brochures, and technical data publications.	<a href="http://rok.auto/literature">rok.auto/literature</a>
<b>Product Compatibility and Download Center (PCDC)</b>	Download firmware, associated files (such as AOP, EDS, and DTM), and access product release notes.	<a href="http://rok.auto/pcdc">rok.auto/pcdc</a>

## Documentation Feedback

Your comments help us serve your documentation needs better. If you have any suggestions on how to improve our content, complete the form at [rok.auto/docfeedback](http://rok.auto/docfeedback).



At the end of life, this equipment should be collected separately from any unsorted municipal waste.

Rockwell Automation maintains current product environmental compliance information on its website at [rok.auto/pec](http://rok.auto/pec).

Rockwell Otomasyon Ticaret A.Ş. Kar Plaza İş Merkezi E Blok Kat:6 34752 İcerenköy, İstanbul, Tel: +90 (216) 5698400 EEE Yönetmeliğine Uygundur

Connect with us.

[rockwellautomation.com](http://rockwellautomation.com) ————— **expanding human possibility™**

AMERICAS: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

EUROPE/MIDDLE EAST/AFRICA: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

ASIA PACIFIC: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Allen-Bradley, expanding human possibility, Rockwell Automation, Rockwell Software, and Stratix are trademarks of Rockwell Automation, Inc.  
Trademarks not belonging to Rockwell Automation are property of their respective companies.